
Digi TV Software Upgrade Guide

Before upgrading, please make sure that **PME390S.UPD** file has been stored in SD Card. Storing the file into SD Card can be done with *SD Card reader* connected to computer unit or using Digi TV-390 as *SD Card reader*.

I. Unzip software upgrade file


1. Download the .zip file
2. Unzip the .zip file to c:\Update File
Enter the folder until you see "PME390S.upd" file

II. Using Digi TV 390 as "SD Card reader".

1. Insert SD Card into Digi-TV390 SD-Card slot.
2. Turn on the unit
3. Using USB-Connector, connect Digi TV 390 unit to computer. When computer successfully read the SD-Card, this window will appears*



4. Choose the "Open folder" option and click ok to read contain of SD Card.
5. Copies the **PME390S.UPD** file into SD Card by:
 - dragging it to SD Card window, or
 - right-click on the **PME390S.UPD** file and click *copy*

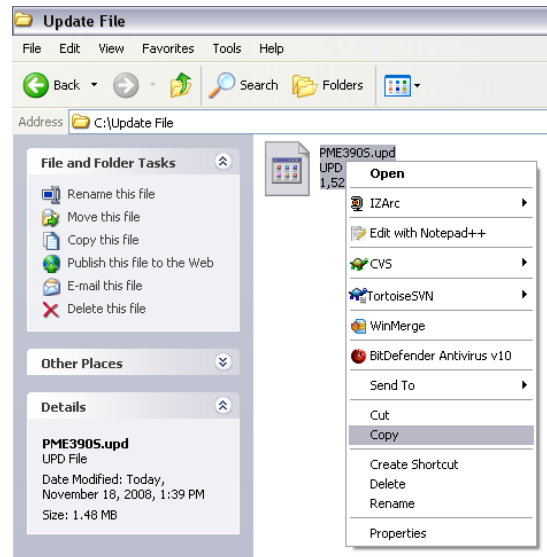


Then, in any empty spaces in Removable Disk windows, right-click the mouse and click *Paste*



6. Plugged out the USB connector from Digi TV 390 and the unit will re-start automatically


* If this wizard doesn't appear, open the SD Card manually through "My Computer". When computer successfully read SD Card, a Removable Disk icon will appears. Click on the icon to open.

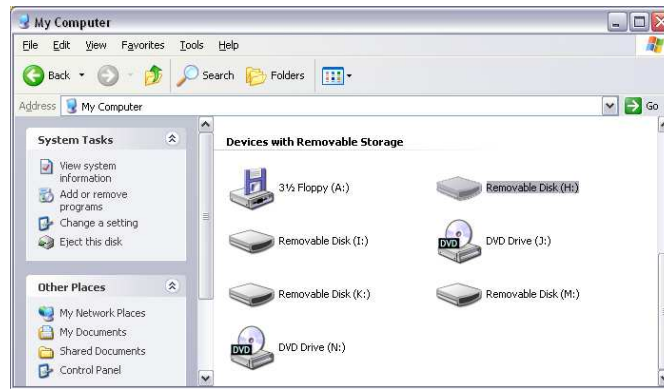


III. Software Upgrading

1. Ensure SD-Card containing **PME390S.UPD** file is inserted into Digi TV 390 SD-Card slot.**
2. Plugged the adaptor into unit

3. Select *System Setting* in Home and follow these steps

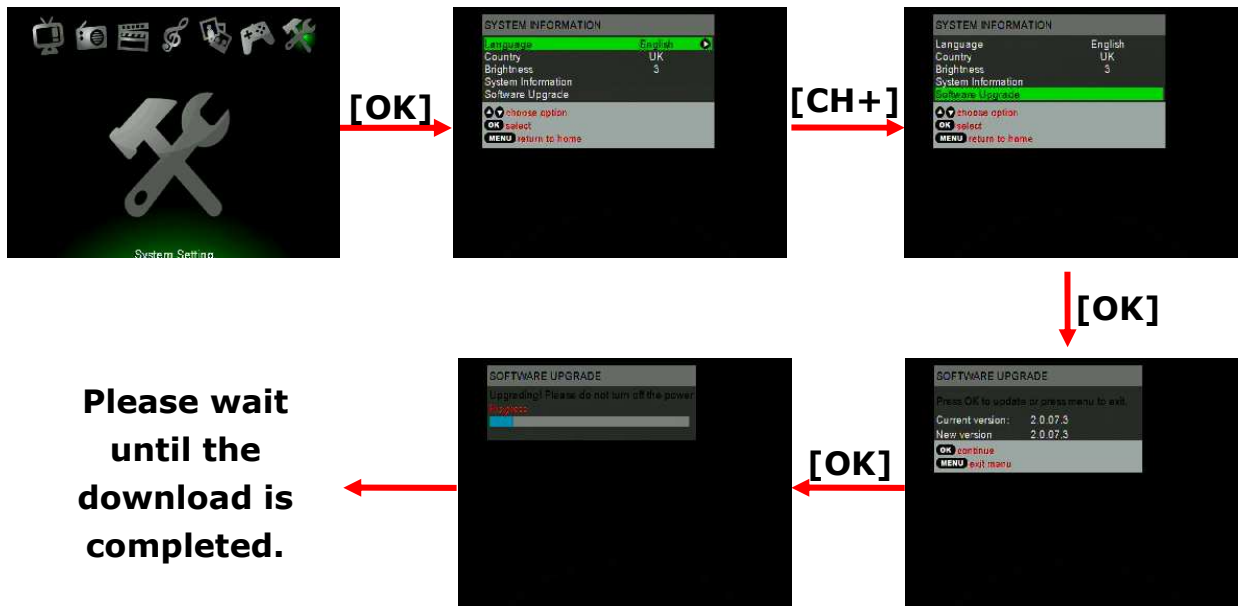

Download is completed when you see this screen

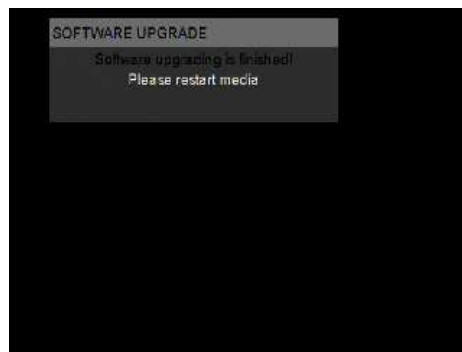

** If SD-Card is read by the media an icon will appears beside the battery indication



**SD-Card
indicator icon**